

Wall Plate Audio Amplifier with CSR B/T Wireless v4.2 User Manual

FEATURES

- B/T v4.2 with apt-X
- 24W class-D high quality power amplifier
- Compact size wall plate design
- Easy installation

SPECIFICATIONS

- Audio Inputs :B/T Receiver or stereo audio line level
- B/T Version: B/T v4.2 compliant with apt-X
- B/T Receive Distance:50 Meters (open space)
- Power Amplifier Type :Stereo Class-D
- Output power:24W(rms) per channel (@ RL=4 ohm)
- THD+N :0.1 % (@ RL=4 ohm, f = 1 kHz)
- Minimum Load Resistance :4 ohm
- Includes Speaker Protection circuit.
- Power Source:24 VDC
- 3 min link-lost timeout function.
B/T automatically switch to pairing state if reconnecting fail.
- Audio priority: B/T > Aux In

CONNECT AND OPERATE

STEP 1: Install the unit in wall and connect power and speaker cables

STEP 2: Turn on the rotary switch to power up

STEP 3: B/T status LED quick blinking in open pairing mode, connect your B/T devices to **B/T Audio Amplifier**

STEP 4: For Aux-In source, plug-in audio cable and play. The unit will automatically switch between B/T and Aux-In

