User Manual In-Wall WiFi Audio Amplifier

http://www.ten-tronics.com

Introduction :

This wireless audio streamer is of great performance and especially designed to meet the high demand of the installation market. This system uses free iOS and Android applications to easily control the audio system. You can steam the same music to all zones or different music to different zones, no matter the music from call phone memory or online steaming services such as Spotify.

Content :



In-Wall WiFi Audio Amplifier * 1

• Power Adaptor * 1

Interface and Function :



(1) WiFi STATUS :

•Blue light flashes slowly : System initialization.

•Blue light flashes quickly: WiFi connecting / Allow WiFi connection setting.

• Green light: WiFi connected.

(2) RESET : Use to reset the device when it has problem in WiFi connection.

(3) AUX IN : 3.5mm Audio In.

How it works :



Installation Guide :

1. Unpack

Verify all the accessories are included in the package.

2. Place

Fix the amplifier at a safe and proper location.

Note: The antenna should not be attached to metal and kept away from metal materials.

3. Connect

-Power connection

Power the amplifier with the power adaptor included in the accessories.

-Audio connection

Use the terminal provided by the product to connect speakers.

4. Download the APP

Download the application (4STREAM or MUZO Player) from the App Store for iOS and Google Play for Android.







MUZO Player

5. Configure :

- I. Connect your mobile device to your network.
- II. Power the device.
- III. After waiting for the blue light of the device to flash slowly, choose the hotspot (SoundSystem_xxxx) in the WiFi setting on your cell phone and connect.
- IV. Open the application (4STREAM or MUZO Player).
- V. Application will search for the device. After the device is found, click the connect button in the app.



- VI. Choose the network you want the device to use (Only supports 2.4G networks), click continue.
- VII. Wait for the device to be configured.



Application Playback :

Your device list will show all available zones. Press a zone to see the information on the current source. While on the view for the source, swipe right to reveal the available sources. From there, you can select what source you want to hear next, or swipe left to return to the currently playing source.



Streaming from cell phone memory/online Music Services :

These screens let you access your available music.

	1X4X - 114	17 (* 10	<
Q			
\heartsuit			
∿	My Music		
	Internet Radio		
Ρ	Pandora		F
979	iHeartRadio		
8			
0	QQMusic		
••••	TIDAL		



Device Settings :

Through device settings you can get technical information on your speaker, or rename it. (Note -_Speaker info can confirm the firmware version.)

Calexa 🐨 🕬 🕇 Speake	erinfo
Personal Hotspot	\bigcirc
Wi-Fi Password	
The hotspot will be hidden connected to the home LAI f connection is lost or the s	when the speaker is N, and will visible again speaker is restored to its
factory settings.	
Other Information	
Speaker_Name	SoundSystem_AUF9
Firmware Version	4.2.8422.23
Build Date	20200622
UUID FF31F09	E07119E42DCA56FD1
Audio Prompts Langua	ge EN_US >
Restore Factory Setting	is >

-Rename

- 1. Click "Gear" icon.
- 2. Click "Rename".
- 3. Click "Custom...".
- 4. Enter new name of the device and Click "Confirm".
- 5. Click "Finish", Complete the Rename.

(Note - If there is an updated name and then initialize the device, the SSID will be changed to the last custom name plus the serial number of the product.)

내 台湾大哥大 📚 11:16 🛞 100% 💻		8大哥大 📚	11:16	@ 100% 🚍		■■ 台湾大哥大 📚	11:17	@ 100% 🚍
C Devices +	<	Sou	ndSystem_90F9)		<	Name Device	Finish
SoundSystem_90F9 {o}		Rename		>		Custom		
6 B	8	Speaker	Info	>		SoundSyster	π_90F9	~
	70	Alarm C	ook			Bathroom		
		Aumo	our			Bedroom		
		EQ				Den		
	7 🖻	Preset C	ontent	>	ן ד	Dining Room		
	0	Sleep Ti	mer			Family Room	1	
						Foyer		
						Garage		
Play All						Garden		
ul 台湾大町大 今 11:19 @ 100% —	ni é	8大司大 🗢	11:19	⊕ 100%		all 台湾大哥大 중	11:19 Daniara	@ 100% == +
	<	ŀ	lame Device	Finish			Devices	-0-
Custom	Cu	tom				WiFi_Audio		ႏွေး
S Please enter name	Wil	i_Audio		~		- •	-•	<u> </u>
E WIFLAudid	So	indSystem	90F9					
E Cancel Confirm	Bat	hroom			k.			
Den	Ве	Iroom						
Dining Room	De	ı						
qwertyuiop	r Din	ng Room			· /			
asdfghjkl	Far	nily Room						
☆ z x c v b n m ⊗	Fo	er						
123 🌐 👰 space return	Ga	age					Play All	

Firmware update :

Device will notify in your application when there is a new firmware version available. It's recommended to update firmware whenever available as this might not only correct bugs improve security.

-Update process

- 6. Click "NEW" icon.
- 7. Click "Upgrade".
- 8. Don't turn off the power, the device will update automatically. (Note -_Speaker info can confirm the firmware version.)



山口台湾大哥大 🗢	11:38	@ 100% 💼)	
Personal Hotspot		0	
Wi-Fi Password			
The hotspot will be his connected to the horr if connection is lost or factory settings.	dden when he LAN, and r the speak	the speaker is I will visible again er is restored to its	
Other Information			
Speaker_Name	So	undSystem_A0F9	
Firmware Version		4.2.8422.23	
Build Date		20200622	
UUID FF3	1F09E071	19E42DCA56FD1	
Audio Prompts Lar	nguage	EN_US >	

Device Specification:

Wireless network	IEEE802.11 b/g/n 2.4G
Power Input	DC 24V
Output Power(4 ohm)	25W/45W
Audio Source Input	3.5mm Phone Jack
Frequency Response	20Hz to 20kHz
EQ(Bass/Treble)	±10db
Music format	MP3/WMA/AAC/AAC+/ALAC/FLAC/APE/WAV
05	iOS
05	Android
Amplication	4STREAM
Application	MUZO Player
Music platforms	vTuner 、 Pandora 、 Deezer 、 iHeartRadio 、 Spotify 、 QQMusic 、 TIDAL 、 Napster 、 Qobuz 、 企鵝 FM
Support Airplay	
Support Multizone	

FAQ:

1. Can other adapters be used?

Recommended to use the product original adapter. Using other adapters may cause the product to crash or damaged.